



Custom Retractable Screen Measuring Instructions

STEP 1. Casper Disappearing Screens are custom cut and recess-mounted directly into the door jamb. Select a continuous flat surface around the entire door frame inside the door jamb. The surface must have at least 1" of clearance (depth) for the frame housing components to be installed on the hinged side of the door(s). All other sides of the door frame require at least 15/16" clearance (depth) for a trouble-free installation.

STEP 2. Measure the height of door frame's mounting surface to the nearest 1/16". The height should be measured on the hinged side of the door frame. When measuring the height for double doors, if the measurements differ, note both dimensions. If the bottom threshold is sloped, measure to the highest point on the threshold where the screen will mount. (See Diagram 2 where the arrows meet) In this case, you will need wedge shims (not included) to shim the bottom track on the threshold so that it is level.

STEP 3. Measure the width of the door at the TOP and BOTTOM to the nearest 1/16". If these measurements differ, use the SMALLER of the two measurements.

STEP 4. Double check your measurements for accuracy and you are now ready to order your Casper Disappearing Screen!

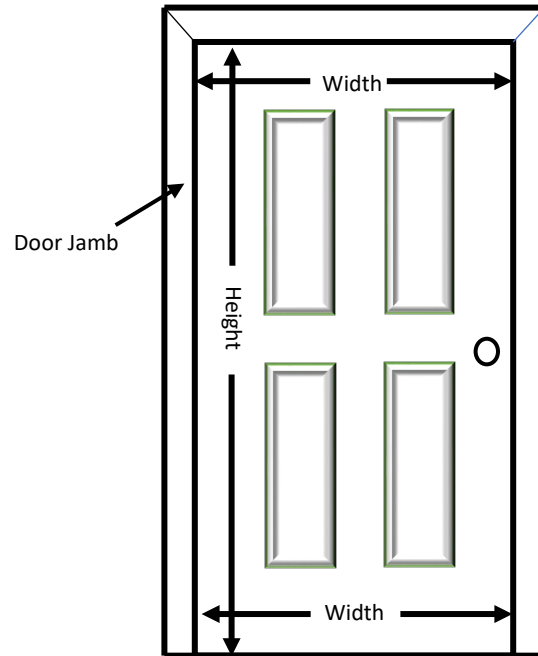


Diagram 1- Single Door

Diagram 2- Threshold Side View


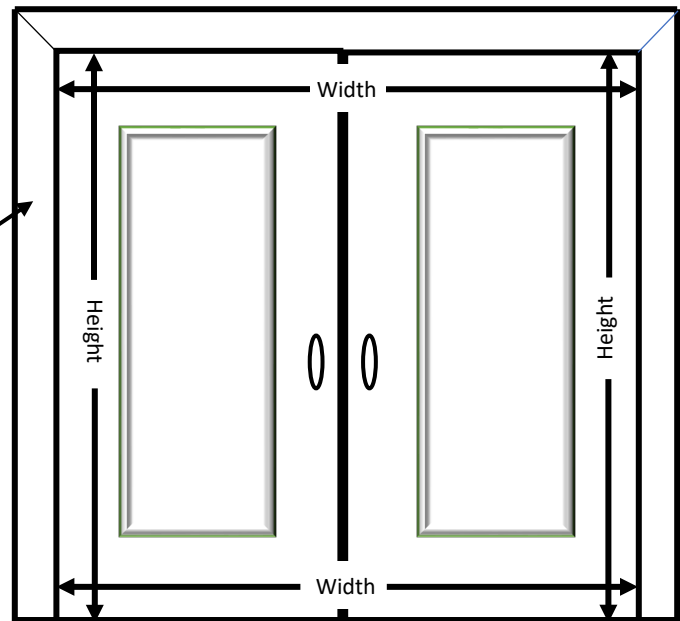


Diagram 3- Double Door

Scan the code to view our Measuring Video

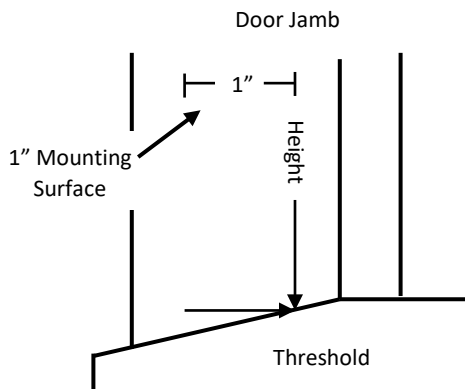